
 


Installation Manual

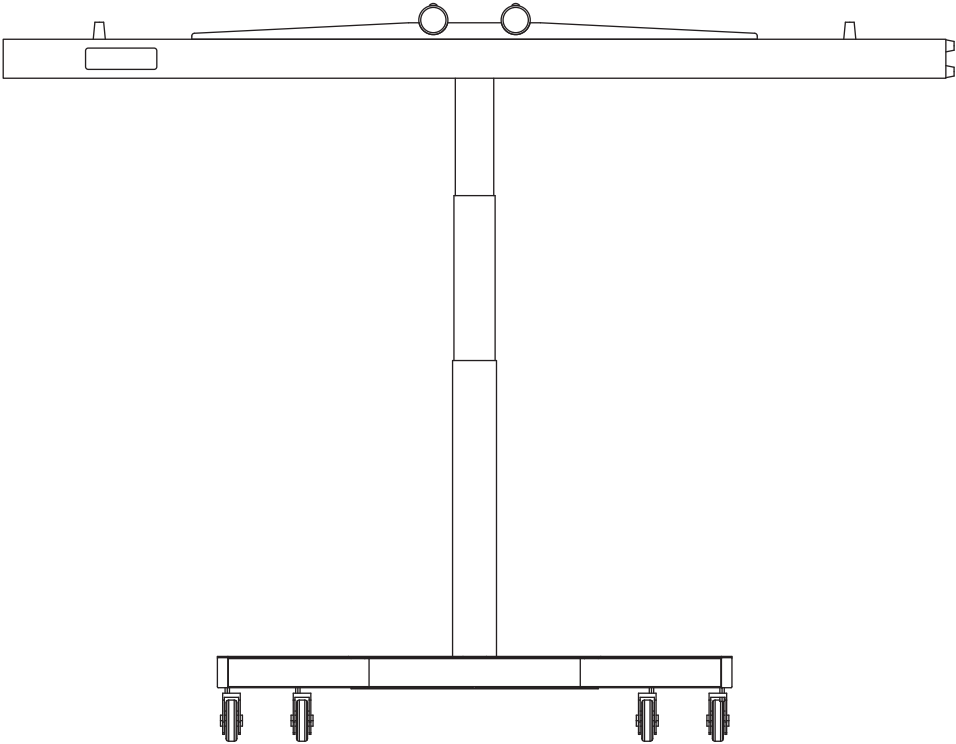

Component Parts



 
A) Square Post
(1)



B) Base
(1)



C) Universal Wheel
(4)



D) Base Plate
(1)



 
E) Remote Control
(1)




F) Power Cord
(1)



G) Adaptor
(1)



 H) Control Box
(1)




I) Wire Controller
(1)



J) Fixing Rod For Lamp
(2)



 K) Transverse Brace
(2)



L) Lifting Rod Connection
(1)

Screws List



M) Screws
M6*14(20)



N) Screws
M8*60(8)



O) 4mm Hexagon Wrench
(1)



P) 5mm Hexagon Wrench
(1)



Q) Cross Screws
M5*10(6)




R) Screws
M8*20(4)





S) Screws
M6*16(6)

1. Put the control system into the corresponding position according the picture, except the wire controller.

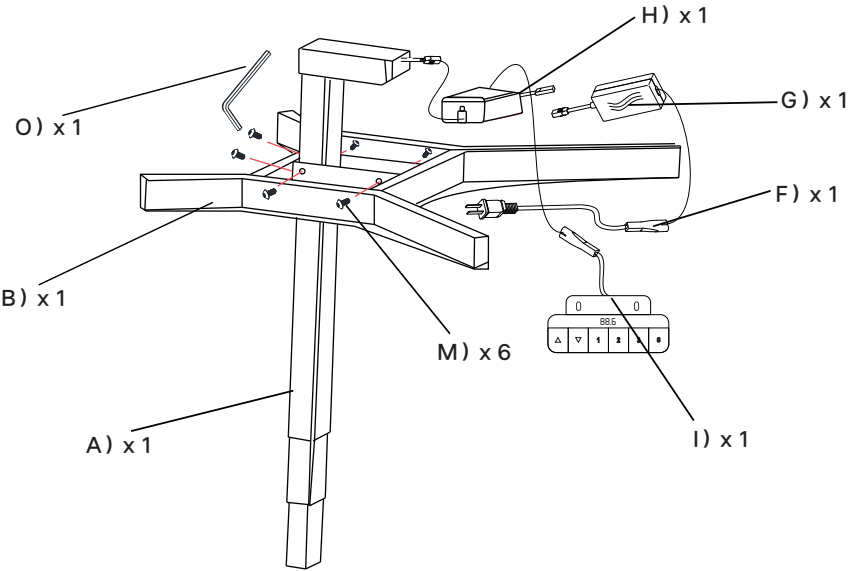


2. Fix cross screw M5*10 by cross screwdriver as picture.

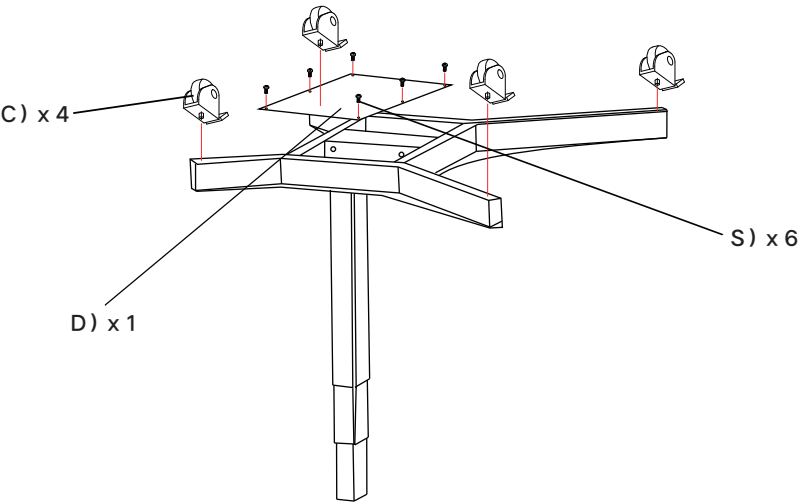

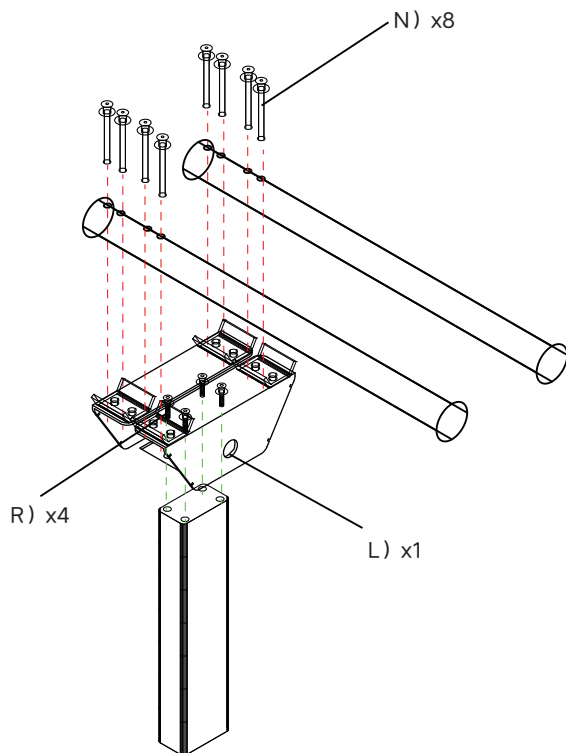


Operation Manual

Remote Control

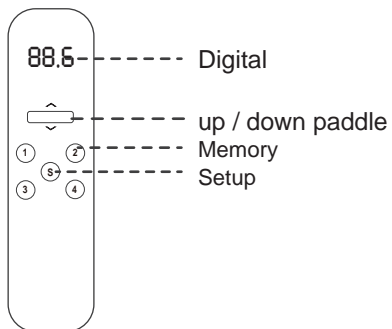

Controller

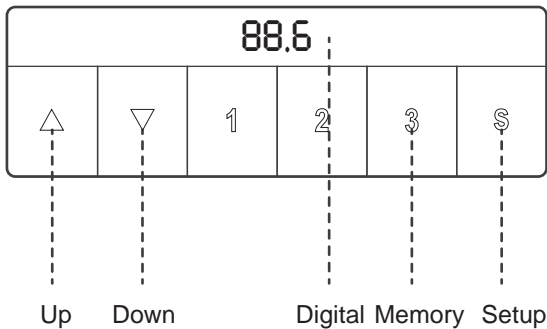

Remote control matching

Keep press the button " S + 4 " , the remote digital screen show "00.0". also connect the power of mobile stand, then the remote's digital screen show "Co", that means successful pairing.

Reset Operation

Keep prress "up/down paddle" to down 10 s, waiting the digital screen show height number.

Memory function

Handset:Touch "S" button,indicator show "S-",meanwhile "S-" flicker,at the same time touch "1-4" button to reserve this position to relative "1-4",four memory positions can reserve.

Unit Conversion

Keep press"S" for 8s,the unit "cm""inch"system will switch automatically.

Operation System Protection




After runs continuously for 3~4 times,control system will be in protection position. The handset shows "HOT",meanwhile,the remote control and handset will be invalid. 18mins later,automatically connect or directly power off.(power off refers to indicator light of adapter goes out)

Precautions:



- 1) The product shall be used in accordance with the technical parameters;
- 2) Keep away from corrosive gas and dusty environment,pay attention to waterproof.

It can work normally after doing RESET operation when controller show "RST".



Panel mounted on stand

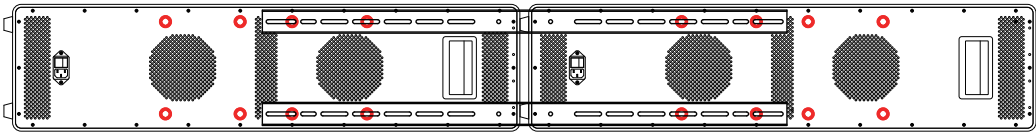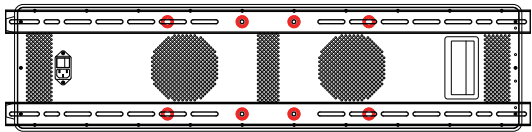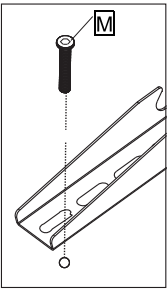


RH1000

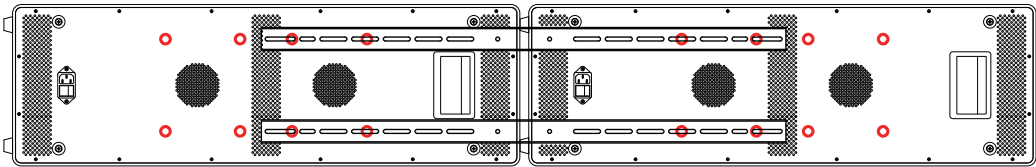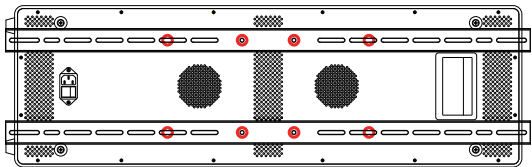




RH1500

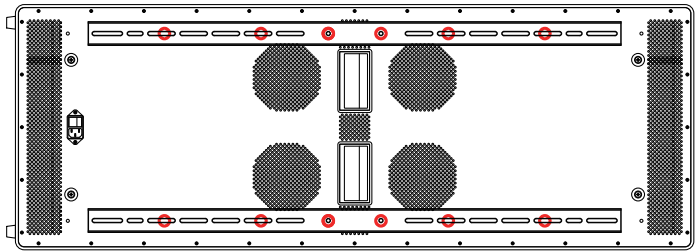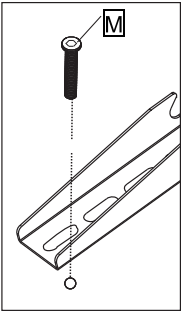



RH2400

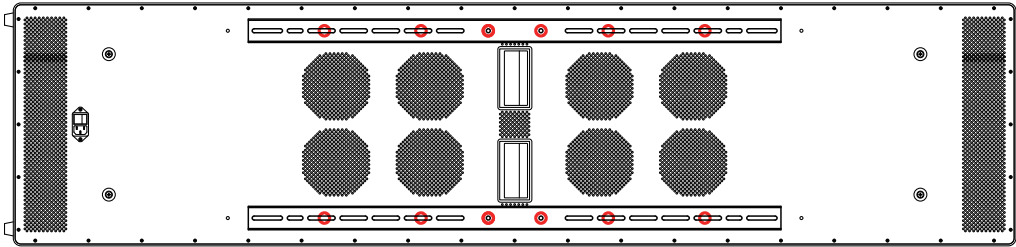


Full Body Red Light Panel (RH3600)

  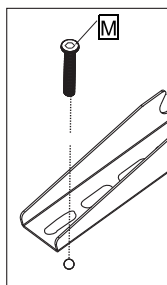


SL1000

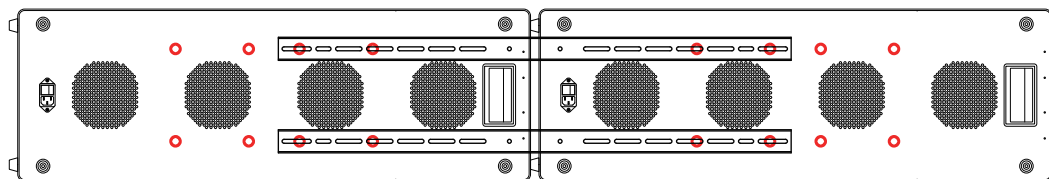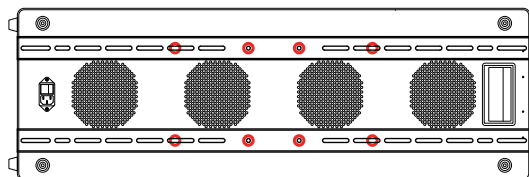

SL1500

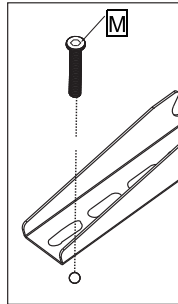


J) x 2

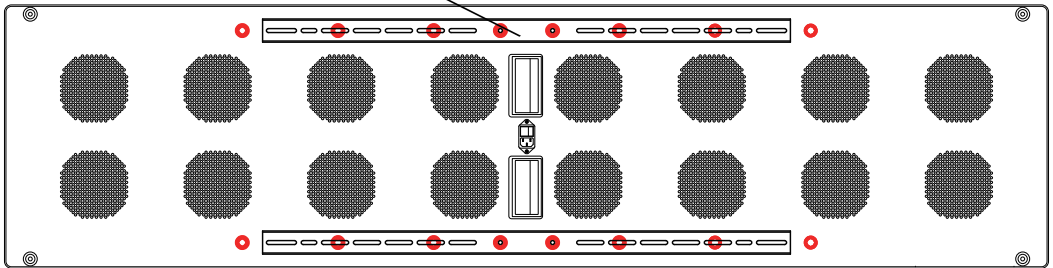

SL5000

Panel mounted on stand

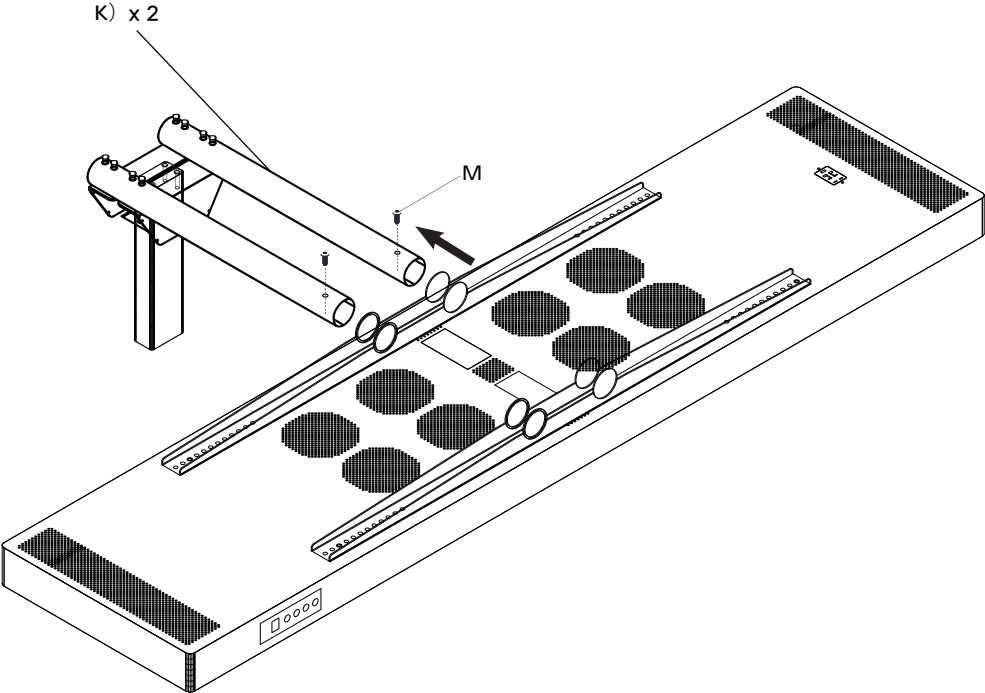

The light panel can be rotated 90° and use for vertical and horizontal use.

